
3 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the GY15CS* TFT-LCD monitors.


WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

3-1 Disassembly

- Cautions:
1. Disconnect the monitor from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.
 3. R/Cover opening jig : BH81-00001A



1. Locate the monitor on the cushion table face down.

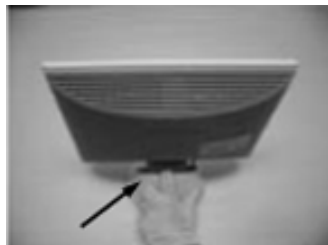

2. Loosen the snaps on stand door through the slot on rear cover. Remove 4 screws.





3. Remove 2 cable screws.



4. Remove 2 screws on the rear cover.



5. Open the rear cover by using an opening jig.

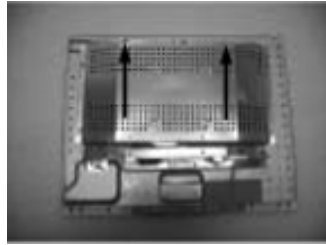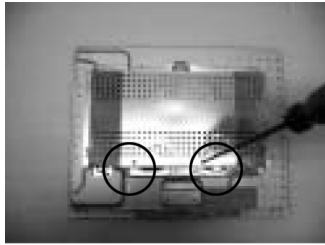

6. Remove 2 screws of PCB shield.



7. Disconnect the panel(inverter) cable from IP-board.



8. Remove 7 screws of IP-board.



9. Separate front assy and panel assy.



10 Remove 4 screws on LCD-panel.